

4-channel grating ruler magnetic grating ruler encoder 5MHz high-speed pulse signal to RS485/232/WiFi module WJ166

Product features:

- The grating ruler and magnetic grating ruler are decoded and converted into standard Modbus RTU protocol
- High speed grating ruler magnetic grating ruler 4th harmonic counting, with a frequency of up to 5MHz
- The module can output a 5V power supply to power the grating ruler
- Supports simultaneous counting of 4 grating rulers, capable of recognizing forward and reverse rotation
- It can also be set as an 8-channel independent DI high-speed counter
- The encoder count value supports automatic power-off saving
- 1000V isolation between DI input and RS485/232 communication interface
- Reset and set count values through RS-485/232 interface
- WiFi supports Modbus TCP and MQTT communication protocols
- Built in web page function, data can be queried through web pages
- Wide power supply range: 8~32VDC
- Standard DIN35 rail installation, convenient for centralized wiring
- Dimensions: 120mm x 70mm x 43mm


Typical applications:

- Grating ruler magnetic grating ruler length measurement
- Flow meter pulse counting or flow measurement
- Counting of products on the production line
- CNC machine position data measurement
- The encoder signal is transmitted remotely to the industrial computer
- Replace PLC to directly transmit data to the control center

Product Overview:

The WJ166 product realizes signal acquisition between sensors and hosts, used to decode encoder signals. The WJ166 series products can be applied to industrial automation control systems, automation machine tools, industrial robots, coordinate positioning systems, displacement measurement, travel measurement, angle measurement, speed measurement, flow measurement, product counting, and more, using RS-232/485 and WiFi buses.

The product includes signal isolation, pulse signal capture, signal conversion, and RS-485 serial communication. Each serial port can connect up to 255 WJ166 series modules, and the communication method adopts ASCII code communication protocol or MODBUS RTU communication protocol. The baud rate can be set by code and can be hung on the same RS-485 bus as control modules from other manufacturers, making it easy for computer programming.

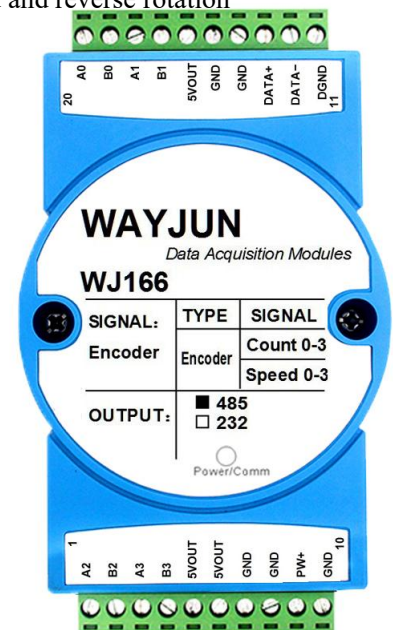

WJ166

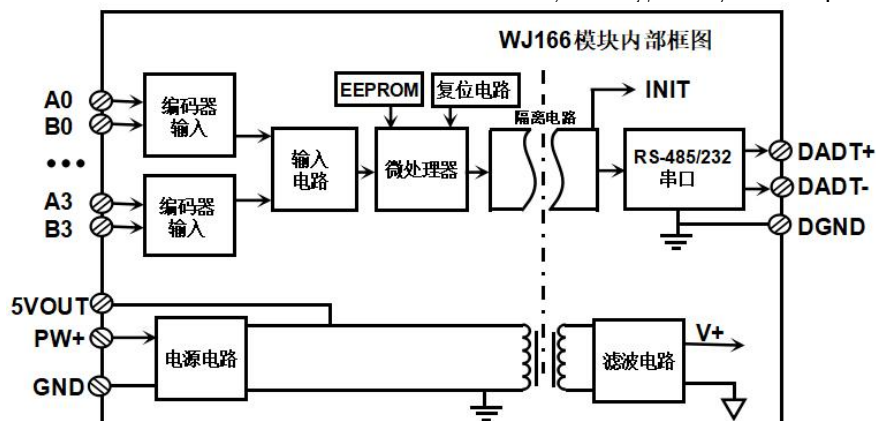


Figure 2 Internal Block Diagram of WJ166 Module

The WJ166 series products are intelligent monitoring and control systems based on microcontrollers. All user set configuration information such as address, baud rate, IP address, parameter settings, etc. are stored in non-volatile memory EEPROM.

The WJ166 series products are designed and manufactured according to industrial standards, with strong anti-interference ability and high reliability. The working temperature range is -45 °C to +85 °C.

Function Introduction:

The WJ166 remote I/O module can be used to measure four encoder signals, and can also be set as an 8-channel independent counter or DI status measurement.

1、 Signal input

4-channel encoder signal input or 8-channel independent counter, can be connected to dry and wet contacts. Please refer to the wiring diagram for details.

2、 RS485/232 communication protocol

Communication interface: 1 standard RS-485 communication interface or 1 standard RS-232 communication interface, please specify when ordering and selecting.

Communication Protocol: Supports two protocols, the character protocol defined by the command set and the MODBUS RTU communication protocol. The module automatically recognizes communication protocols and can achieve network communication with various brands of PLCs, RTUs, or computer monitoring systems.

Data format: 10 digits. 1 start bit, 8 data bits, and 1 stop bit. No verification.

The communication address (0-255) and baud rate (2400, 4800, 9600, 19200, 38400, 57600, 115200bps) can be set;

The communication network can reach a maximum distance of 1200 meters and is connected through twisted pair shielded cables.

High anti-interference design of communication interface, $\pm 15\text{KV}$ ESD protection, communication response time less than 100mS.

3、 WiFi communication protocol

Communication interface: WiFi network interface. It can connect to WiFi in the local area network and then connect to Ethernet.

Communication protocol: Supports MQTT protocol and can connect to various MQTT servers such as Alibaba Cloud, Tencent Cloud, Huawei Cloud, China Mobile IoT OneNET, private cloud, etc. MODBUS TCP protocol can also be used to achieve industrial Ethernet data exchange.

It also supports communication protocols such as TCP/UDP/WebSocket.


Network cache: 2K bytes (for both sending and receiving)

Communication response time: less than 10mS.

4、 anti-interference

Checksums can be set as needed. There is a transient suppression diode inside the module, which can effectively suppress various surge pulses, protect the module, and the internal digital filter can also effectively suppress power frequency interference from the power grid.

Product selection:

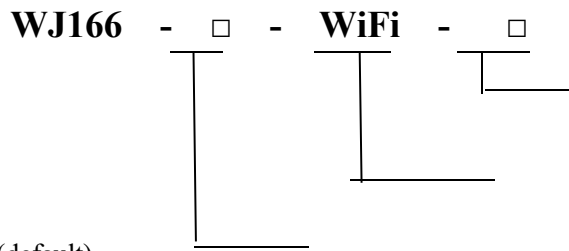

Form of antenna

N built-in antenna (default)

Communication interface 2

WiFi: Output as WiFi network interface

Communication interface 1

485: Output as RS-485 interface

232: Output as RS-232 interface

Selection Example 1: Model: **WJ166-485-WiFi - N** indicates RS-485 interface output, WiFi built-in antenna

Selection Example 2: Model: **WJ166-232-WiFi-N** with RS-232 interface output and built-in WiFi antenna

WJ166 General Parameters:

(Typical @+25 °C, Vs is 24VDC)

Input type: Encoder AB signal input, 4-channel (A0/B0~A3/B3).

Low level: Input<1V

High level: Input 3.5~30V

Frequency range 0-5MHz (all channels input simultaneously)

Encoder counting range -2147483647 ~+2147483647, using 4x counting, automatically saved when powered off

DI counter range 0~4294967295 , automatically saved when powered off

Input resistance: 30K Ω

Communication 1: Protocol RS-485 or RS-232 standard character protocol and MODBUS RTU communication protocol

The baud rate (2400, 4800, 9600, 19200, 38400, 57600, 115200bps) can be set on the webpage

Address (0-255) can be set on the webpage

Communication 2: MQTT communication protocol or MODBUS TCP communication protocol or TCP/UDP communication protocol

Communication response time: 100 ms maximum

Working power supply:+8~32VDC wide power supply range, with internal anti reverse and overvoltage protection circuits

Power consumption: less than 1W

Working temperature: -45~+80 °C

Working humidity: 10~95% (no condensation)

Storage temperature: -45~+80 °C

Storage humidity: 10~95% (no condensation)


Isolation withstand voltage: DI input and power supply are grounded together, and 1000V isolation is provided between them and the communication interface.

Dimensions: 79 mm x 69.5mm x 40mm



Pin definition:

Pin	name	Description	Pin	name	Description
one	A2	Encoder 2 signal A input terminal	eleven	DGND	Signal Ground
two	B2	Encoder 2 signal B input terminal	twelve	DATA-	RS-485 signal negative terminal
three	A3	Encoder 3 signal A input terminal	thirteen	DATA+	RS-485 signal positive terminal
four	B3	Encoder 3 signal B input terminal	fourteen	GND	Negative end of power supply
five	5Vout	5V distribution output	fifteen	GND	Negative end of power supply
six	5Vout	5V distribution output	sixteen	5Vout	5V distribution output
seven	GND	Negative end of power supply	seventeen	B1	Encoder 1 signal B input terminal
eight	GND	Negative end of power supply	eighteen	A1	Encoder 1 signal A input terminal
nine	PW+	Positive end of power supply	nineteen	B0	Encoder 0 signal B input terminal
ten	GND	Negative end of power supply	twenty	A0	Encoder 0 signal A input terminal

Table 1 Pin Definition

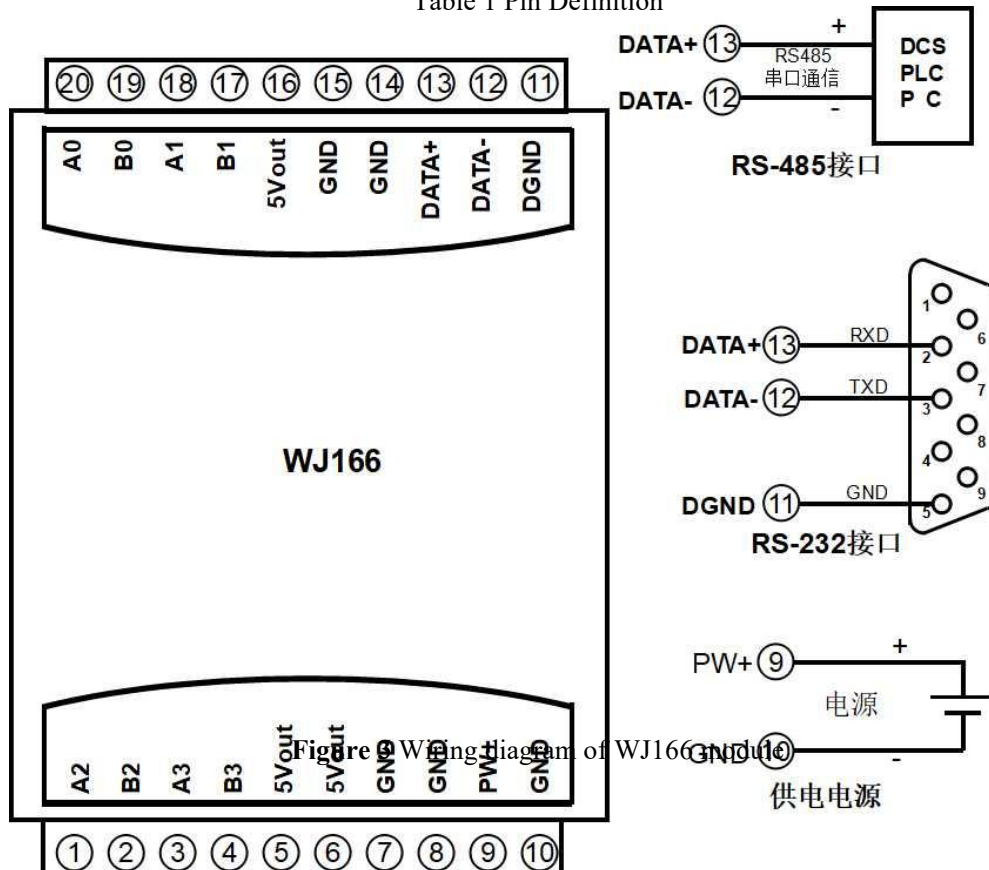



Encoder signal input wiring diagram (counting mode 0)

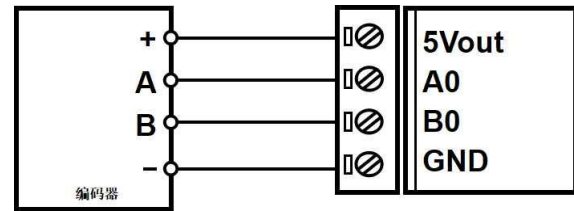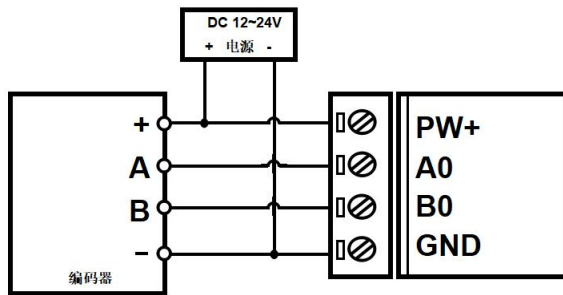

Wiring diagram for encoders powered by 12V or 24V and encoders powered by 5V

Note: The factory default is to turn off pull-up. If it is an NPN encoder, the internal pull-up resistor needs to be turned on in the module webpage.

DI Counting Input Wiring Diagram (Counting Mode 1)

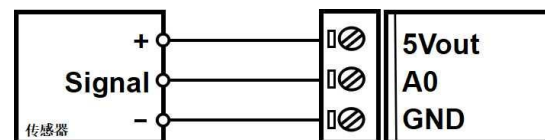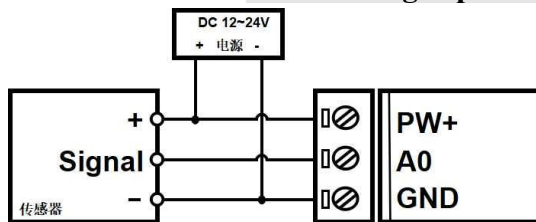

powered by 12V or 24V, wiring diagram of photoelectric switch powered by 5V

Note 1: The factory default is **counting mode 0**, and DI counting needs to be modified to **counting mode 1** in the module webpage.

Note 2: The factory default is to turn off the pull-up function. If it is an NPN sensor, dry contact, or switch input, the internal pull-up resistor needs to be turned on in the module webpage.

Firstly, configure the WJ166 module through your mobile phone



1. Put the module into AP mode

- (1) Connect the power and turn the switch on the side of the module to the initialization position.
- (2) Open the wireless LAN on your phone or Go to "Settings → WLAN" and connect to the WiFi named "wifi 8".



The factory password for this module is: 12345678, then "Join".



2. Enter the module webpage.

After connecting to the WiFi of the module, wait a few seconds and it will automatically redirect to the built-in webpage of the module, as shown in the left figure. If the phone cannot automatically redirect, you can also open the mobile browser and enter the website 192.168.4.1 to log in.

Click on the [configuration module parameter](#) link to enter the configuration interface



3. Configure module DI parameters

Please modify the following parameters according to actual needs:

(1) A0B0~A3B3 input counting mode:

Counting mode 0: Encoder AB signal input;

Counting mode 1: Two independent counter inputs;

Please fill in according to the actual input sensor, and select the encoder AB signal input for the grating ruler and magnetic grating ruler.

(2) Encoder 0~3 pulses per revolution: The number of pulses per revolution of the encoder. If you need to measure the speed, please set it according to the actual parameters. The module will automatically convert the rotational speed per minute.

(3) Encoder 0-3 pulse rate: Set the actual value corresponding to each pulse, default to 1, and convert the actual engineering value to this value and the actual number of 4th harmonic pulses. For example, if each pulse is 0.005mm and can be

A3B3输入计数模式

0:编码器AB信号输入

DI输入方式

PNP或TTL或湿接点

编码器0每转脉冲数

1000

编码器1每转脉冲数

1000

编码器2每转脉冲数

1000

编码器3每转脉冲数

1000

编码器0脉冲倍率

1

编码器1脉冲倍率

1

编码器2脉冲倍率

1

编码器3脉冲倍率

1

DI计数边沿(A0~B3)

00000000

11:00

5G

192.168.4.1
wifi8

< >

登录

取消

DI设置

A0B0输入计数模式

1:两路独立的计数器输入

A1B1输入计数模式

1:两路独立的计数器输入

A2B2输入计数模式

1:两路独立的计数器输入

set to 0.005, then the actual engineering value is $0.005 * \text{number of pulses}$.

- (4) DI input method: Choose NPN or PNP input based on the actual sensor connected. After selecting NPN input, internally connect the pull-up voltage to the positive power supply, with a pull-up resistance of 10K ohms; Select PNP input and turn off the pull-up voltage internally.
- (5) DI counting edge: Different edge trigger counts can be set, with 0 indicating rising edge count and 1 indicating falling edge count. Use the default rising edge count normally.

A3B3输入计数模式

1:两路独立的计数器输入

DI输入方式

PNP或TTL或湿接点

DI计数边沿(A0~B3)

00000000

A0每转脉冲数

1000

B0每转脉冲数

1000

A1每转脉冲数

1000

B1每转脉冲数

1000

A2每转脉冲数

1000

B2每转脉冲数

1000

A3每转脉冲数

1000

B3每转脉冲数

2000

A0滤波时间

0

B0滤波时间

0

A1滤波时间

0

B1滤波时间

0

A2滤波时间

0

B2滤波时间

0

(6) A0~B3 number of pulses per revolution: The number of pulses per revolution of DI. If you need to measure the speed, please set it according to the actual parameters. The module will automatically convert the rotational speed per minute.

(7) A0~B3 filtering time: The value range is 0 to 65535.

If it is 0, it means no filtering; The other values represent the filtering time, in mS (milliseconds). If the DI input point is a mechanical switch or mechanical relay, it is recommended to set the filtering time to 20mS.

(8) A0~B3 pulse rate: Set the actual value corresponding to each pulse, default to 1, and convert the actual engineering value to the actual pulse based on this value. For example, if each pulse is 0.005mm and can be set to 0.005, then the actual engineering value is $0.005 * \text{number of pulses}$.

A3滤波时间

B3滤波时间

A0脉冲倍率

B0脉冲倍率

A1脉冲倍率

B1脉冲倍率

B2脉冲倍率

A3脉冲倍率

B3脉冲倍率

RS485/232设置

模块地址

模块波特率

模块奇偶校验

WiFi设置

WiFi账号

WiFi密码

工作方式

本地IP设置

4. Configure module RS485/232 parameters

Please modify the following parameters according to actual needs:

- (9) Module address: The communication ID of the module, which defaults to 1.
- (10) Module baud rate: The baud rate used for module communication, which defaults to 9600
- (11) Module parity check: default is no parity check.

IP地址

192.168.0.16

默认网关

192.168.0.1

子网掩码

255.255.255.0

本地端口

23

自动上报时间间隔

2147483647

模块名称

94E6860DDCB8

MQTT设置

打开MQTT功能

MQTT服务器地址

MQTT Client ID

MQTT用户名

MQTT密码

MQTT端口

1883

MQTT发布主题

MQTT发布时间间隔

2000

MQTT订阅主题

保存并重启

Mac地址: 94:E6:86:0D:DC:B8; 版本: V1.0

5. Configure module WiFi parameters

Please modify the following parameters according to actual needs:

- (12) WiFi account: Connect to the WiFi coverage in this area.
- (13) WiFi password: Fill in the WiFi password, if already connected, do not re-enter.
- (14) Working mode: Select the working mode and fill in according to the actual application.

Optional TCP Server, TCP Client, UDP, MODBUS TCP, Websocket, etc.

- (15) Local IP settings: If only MQTT protocol is used, it can be set to automatically obtain IP. If you want to access data through Modbus TCP or web pages, it is recommended to manually set it to a fixed IP address to facilitate communication between the IP address and the module.
- (16) IP address: Set the IP address of the module, which must be in the current WiFi network segment and not the same as the IP address of other devices in the local area network. For example, if the IP of the WiFi router is 192.168.0.1, the IP of the module can be set to 192.168.0.7
- (17) Default gateway: The gateway of the module, fill in the IP address of the current WiFi router. For example, if the IP address of a WiFi router is 192.168.0.1, simply fill in this IP address
- (18) Subnet Mask: The subnet mask of the module. If there is no cross network segment, fill in the default value of 255.255.255.0
- (19) Local port: The communication port of the module, and MODBUS communication generally uses port 502.
- (20) Remote server IP address: The remote server IP, TCP client, and UDP server that needs to be connected to.
- (21) Remote server port: The port of the server.
- (22) Automatic reporting interval: The time interval for the module to report data at regular intervals, set to 0 to indicate that data will not be automatically reported.

- (23) Automatic reporting of count changes: Report a data point when there is a change in the count, which can only be used in situations where the data changes very slowly, otherwise a large amount of data will be sent.
- (24) Module Name: User defined name for a module to distinguish between different modules.
- (25) MQTT settings: If MQTT communication is used, the MQTT function needs to be turned on.
- (26) MQTT server address: Fill in the URL of the MQTT server,
For example: `broker.emqx.io`
If the local server IP is `192.168.0.100`, you can write `192.168.0.100`
- (27) Please fill in the MQTT client ID, username, password, port, publish topic, subscribe topic, and other parameters according to the requirements of the MQTT server. The QoS of MQTT is 0 and cannot be modified.
- (28) MQTT publishing interval: The time interval in milliseconds during which the module automatically publishes data to the MQTT server. Set to 0 to cancel the scheduled publishing function.

6. Save parameters

After completing the parameter settings, click the save and restart button. The module will save the parameters and automatically restart. Then turn the switch on the side of the module to the normal position, and the module will work according to the set parameters.

中国移动 4G

11:22

192.168.4.1

wifi8

< >

登录

取消

DI状态

A0~B3:11111111

计数模式1 (单路脉冲)

计数器

A0:133
B0:133
A1:133
B1:133
A2:133
B2:133
A3:133
B3:133

频率 (Hz)

A0:0
B0:0
A1:0
B1:0
A2:0
B2:0
A3:0
B3:0

实际工程值

A0:133
B0:133
A1:133
B1:133
A2:133
B2:133
A3:133
B3:133

7. View data online on the webpage

Click on the [online data viewing](#) link on the module's homepage to enter the data viewing interface. As shown in the left figure.

If the IP address of the module is 192.168.0.5, users can also obtain JSON format data by accessing the link [192.168.0.5/readData](#).

The DI state represents the input level state.

The pulse counter is the cumulative number of measured pulses.

The pulse frequency is the number of pulses per second.

The pulse time interval is the time interval between the two most recent pulses.

The unit is (seconds)

The actual engineering value is obtained by multiplying the value of the pulse counter by the pulse multiplier set on the webpage. Used for automatically converting actual flow, length, production, and other data.

The rotational speed is obtained by converting the frequency and the number of pulses per revolution. Used for automatically converting actual revolutions per minute.

转速

A0:0
B0:0
A1:0
B1:0
A2:0
B2:0
A3:0
B3:0

修改计数值

A0:

设置

The reset count value can be written as 0 to the table, and then click Settings to reset the count value. Other values can also be set to modify the count value.



```
{
  "enPluse": [
    1000,
    1000,
    1000,
    1000
  ],
  "enZoom": [
    1,
    1,
    1,
    1
  ],
  "diMode": [
    1,
    1,
    1,
    1
  ],
  "diEdge": [
    0,
    0,
    0,
    0,
    0,
    0,
    0,
    0
  ],
  "diPluse": [
    1000,
    1000,
    1000,
    1000,
    1000
  ]
}
```

Save Json data

Clear

8. Batch setting parameters

Click on the [Json Batch Configuration](#) link on the module's homepage to enter the Batch Settings interface. As shown in the left figure.

The data must be in standard JSON format, and all parameters can be set or only some parameters can be set. If there are many products to be set up, batch setting can save time.

After completing the filling, click the button Save Json data.

Example 1: Only changing the WiFi account password can send:

```
{
  "WifiSsid": "w",
  "WifiPassword": "12345678",
  "setIP": 1,
  "ipAddress": "192.168.0.5",
  "gateway": "192.168.0.1",
  "netmask": "255.255.255.0",
}
```

Example 2: Only modifying MQTT parameters can send:

```
{
  "setMQTT": 1,
  "mqttHostUrl": "broker.emqx.io",
  "port": 1883,
  "clientId": "mqtt_test_001",
}
```

```
"username": "",
"passwd": "",
"topic": "mqtt_topic_001",
"pubTime": 2000,
"pubonchange": 0
}
```

9. The module webpage can also be opened on the local area network

If the module is already connected to the local WiFi, you can enter the module IP in the computer or mobile browser, such as 192.168.0.5, to open the module webpage (provided that the computer IP or mobile IP is in the same network segment as the module, and the login operation should be based on the current module IP address), and then enter the internal webpage of the module. You can also configure modules or read module data, and the operation method is the same as the table above.

Character Communication Protocol:

The following command is sent based on the module address as the default 01. If the module address is modified, please change 01 to the new address.

RS485, RS232, and WiFi TCP/UDP communication can all use the following communication protocols.

RS485/RS232 communication: The factory default address is 01, the baud rate is 9600, and there is no parity check. If you forget the address and baud rate, you can turn the switch to the initialization position, and the module will enter configuration mode with address 01, baud rate 9600, and no parity check. You can view or reconfigure parameters by connecting to WiFi through your phone, or send configuration commands to modify parameters. Please turn the switch to the normal position after setting is complete.

WiFi communication: If you want to set WiFi account, password, and other parameters, you can turn the switch to the initialization position. The module will enter AP configuration mode, and the mobile phone can connect to the AP with the WiFi 8 name generated by the module to enter the configuration interface. Please turn the switch to the normal position after setting is complete.

MQTT protocol: After a successful connection, a command is sent to the [MQTT subscription topic](#) of the module, and the replied data is displayed on the [MQTT publication topic](#) of the module.

Under working modes such as TCP Server, TCP Client, UDP Mode, Web Socket, etc.: After a successful connection, commands can be sent and data can be received.

If automatic reporting is set for WiFi communication, the reported data format is the same as the reply format of ([1. Read data command](#)).

1、Read data command

Send: # 01 (WiFi communication, if timed automatic reporting is set, there is no need to send commands, the module will report data at regular intervals)

Reply: {"devName": "EC6260835FBC", "time": 3908582, "diMode": [0,1,1,1], "diState": [1,1,1,1,0,1,1], "enCounter": [0,0,0,0], "enFrequency": [0,0,0,0], "enActual Data": [0,0,0,0,0,0], "enSpeed": [0,0,0,0], "diCounter": [0,0,0,0,0,0,0,0,0], "diFrequency": [0,0,0,0,0,0,0,0,0], "diActual Data": [0,0,0,0,0,0,0,0,0] 0, "diSpeed": [0,0,0,0,0,0,0,0,0]}

Format Description:

The encoder data is arranged in the order of channels 0 to 3; The independent DI data is arranged in the order of A0, B0~A3, and B3.

The module name '[devName](#)' can be modified on the webpage as needed

The internal time of the '[time](#)' module, measured in mS.

[DiMode](#) "module counting mode. **Counting mode 0**: Encoder AB signal input; **Counting mode 1**: Two independent counter inputs

The '[diState](#)' represents the input level state.

The "[enCounter](#)" encoder counter measures the cumulative number of pulses, which is counted using the 4th harmonic counting method. **(Counting mode 0)**

The pulse frequency of the "[enFrequency](#)" encoder is the number of pulses per second. **(Counting mode 0)**

The actual engineering value of the "[enActualData](#)" encoder is obtained by multiplying the value of the encoder pulse counter by the pulse multiplier set on the webpage. Used for automatically converting actual flow, length, production, and other data. **(Counting mode 0)**

The "[enSpeed](#)" encoder speed is calculated by converting the encoder frequency and the number of pulses per revolution. Used for automatically converting actual rotational speed or flow rate per minute, etc.

(Counting mode 0)

The cumulative number of pulses measured by the "[diCounter](#)" independent counter. **(Counting Mode 1)**

The "[diFrequency](#)" pulse frequency is the number of pulses per second. **(Counting Mode 1)**

The actual engineering value of '[diActualData](#)' is obtained by multiplying the value of the pulse counter by the pulse multiplier set on the webpage. Used for automatically converting actual flow, length, production, and other data. **(Counting Mode 1)**

The "[diSpeed](#)" speed is obtained by converting the frequency and the number of pulses per revolution. Used for automatically converting actual revolutions per minute. **(Counting Mode 1)**

It is also possible to read a single set of data, such as reading encoder counters:

Send: # 01>[enCounter](#)

Reply: {"[enCounter](#)": [0,0,0,0]}

For example, reading the actual engineering value of the encoder:

Send: # 01>[enFrequency](#)

Reply: {"[enFrequency](#)": [0,0,0,0]}

Read other parameters and send the corresponding parameter characters.

2. Set encoder 0-3 count value command

The encoder 0-3 count value can be set to 0 or other values, and can be reset or modified.

Send: \$01 {"setEn0Count": 0, "setEn1Count": 0, "setEn2Count": 0, "setEn3Count": 0}

Or \$01 {"setEn0Count": 666, "setEn1Count": 777, "setEn2Count": 888, "setEn3Count": 999}

Only set a single channel: \$01 {"setEn0Count": 0}

Simultaneously set the same value for all channels: \$01 {"setAllENCount": 0}

Reply: ! 01 (cr) indicates successful setting? 01 (cr) indicates a command error

3. Command to set the count values of pulse counters A0~B3

Set the values of pulse counters A0~B3, which can be 0 or other values, and can be reset or the count value can be modified.

Send: \$01 {"setA0Count": 0, "setB0Count": 0, "setA1Count": 0, "setB1Count": 0, "setA2Count": 0, "setB2Count": 0, "setA3Count": 0, "setB3Count": 0} or \$01 {"setA0Count": 1000, "setB0Count": 2000, "setA1Count": 3000, "setB1Count": 1, "setA2Count": 2, "setB2Count": 3, "setA3Count": 999, "setB3Count": 888}

Only set a single channel: \$01 {"setA0Count": 0}

Simultaneously set the same value for all channels: \$01 {"setAllDICount": 0}

Reply: ! 01 (cr) indicates successful setting? 01 (cr) indicates a command error

4、 Read configuration commands

The configuration parameters of the reading module can also be viewed directly on the webpage.

Send: % 01ReadConfig

Reply: {"enPluse": [1,1,1,1], "enZoom": [1,1,1,1], "diMode": [0,1,1,1], "diEdge": [1,1,1,1,1,1], "diPluse": [1,1,1,1,1,1], "diFilter": [0,0,0,0,0,0,0], "diZoom": [1,1,1,1,1,1], "saveData": 1, "ID": 1, "Baud": 115200, "Check": 1, "WifiSide": "w", "WifiPassword": "12345678", "Workmode": 0, "setIP": 1, "ipAddress": "192.168.0.15", "gateway": "192.168.0.1", "netmask": "255.255.255.0", "localPort": 23, "remoteServerIP": "192.168.0.165", "remotePort": 23, "sendTime": 2147483647, "devName": "EC6260835FBC", "setMQTT": 0, "mqttHostURL": "Topic": "", "pubTime": 2000, "subtopic": ""}

5、 Set configuration commands

The configuration parameters of the module can also be set directly on the webpage. You can set all or some parameters, and the module will automatically restart after setting.

send out:

%01WriteConfig{"enPluse": [1,1,1,1], "enZoom": [1,1,1,1], "diMode": [0,1,1,1], "diEdge": [1,1,1,1,1,1], "diPluse": [1,1,1,1,1,1], "diFilter": [0,0,0,0,0,0,0], "diZoom": [1,1,1,1,1,1], "saveData": 1, "ID": 1, "Baud": 115200, "Check": 1, "WifiSsid": "w", "WifiPassword": "12345678", "workmode": 0, "setIP": 1, "ipAddress": "192.168.0.15", "gateway": "192.168.0.1", "netmask": "255.255.255.0", "localPort": 23, "remoteServerIp": "192.168.0.165", "remotePort": 23, "sendTime": 2147483647, "devName": "EC6260835FBC", "setMQTT": 0, "mqttHostUrl": "", "port": 1883, "clientId": "", "username": "", "passwd": "", "topic": "", "pubTime": 2000, "subtopic": ""}

You can also set only a single parameter, such as modifying the baud rate: % 01WriteConfig {"Baud": 115200}

For example, setting power-off without saving the count value: % 01WriteConfig {"saveData": 0}

Reply: ! 01 (cr) indicates successful setting? 01 (cr) indicates a command error

Modbus communication protocol:

RS485/RS232 communication: Supports Modbus RTU protocol, factory default address is 01, baud rate is 9600, no parity check. If you forget the address and baud rate, you can turn the switch to the initialization position, and the module will enter configuration mode with address 01, baud rate 9600, and no parity check. You can view or reconfigure parameters by connecting to WiFi through your phone, or send configuration commands to modify parameters. Please turn the switch to the normal position after setting is complete.

WiFi communication: Supports Modbus TCP protocol. If you want to set WiFi account and password, as well as other parameters, you can turn the switch to the initialization position, and the module will enter AP configuration mode. Connect the mobile phone to the AP with the WiFi 8 name generated by the module to enter the configuration interface. Please turn the switch to the normal position after setting is complete.

The register tables for Modbus RTU communication protocol and Modbus TCP communication protocol are as follows:

Support Function Code 01

Address (PLC)	0X	Address (PC, DCS)	Data content	attribute	Data Explanation
00001		0	A0 input status	read-only	Level status of channels A0~B3 0 represents a low-level input, 1 represents a high-level input
00002		one	B0 input status	read-only	
00003		two	A1 input status	read-only	
00004		three	B1 Input Status	read-only	
00005		four	A2 input status	read-only	
00006		five	B2 input status	read-only	
00007		six	A3 input status	read-only	
00008		seven	B3 Input Status	read-only	
00009		eight	A0 input status	read-only	The inverse value of the level state of channels A0~B3 1 represents a low-level input, 0 represents high-level input
00010		nine	B0 input status	read-only	
00011		ten	A1 input status	read-only	
00012		eleven	B1 Input Status	read-only	
00013		twelve	A2 input status	read-only	
00014		thirteen	B2 input status	read-only	
00015		fourteen	A3 input status	read-only	
00016		fifteen	B3 Input Status	read-only	

Support function codes 03, 06, 16

Address (PLC)	4X	Address (PC, DCS)	Data content	attribute	Data Explanation
40001~40002		0~1	Encoder 0 count	Read/Write	Encoder AB phase counter (counting mode 0)

40003~40004	2~3	Encoder 1 Count	Read/Write	<p>The data is a signed long integer in hexadecimal format, with negative numbers using two complement, Positive numbers (0x00000000~0x7FFFFFFF), Negative numbers (0xFFFFFFFF~0x80000001), The storage order is CDAB. The counting method used is a 4-fold counting method, and the data is 4 times the actual number of pulses. Reset the counter and directly write 0 to the corresponding register, Other values can also be written as needed.</p>
40005~40006	4~5	Encoder 2 Count	Read/Write	
40007~40008	6~7	Encoder 3 Count	Read/Write	
40009~40010	8~9	The frequency of encoder 0	read-only	<p>Pulse frequency of encoder (counting mode 0)</p> <p>The data is a 32-bit floating-point number stored in CDAB order.</p> <p>The data is calculated based on the actual number of pulses per second, not the fourth harmonic.</p>
40011~40012	10~11	Frequency of Encoder 1	read-only	
40013~40014	12~13	Frequency of Encoder 2	read-only	
40015~40016	14~15	The frequency of encoder 3	read-only	
40017~40018	16~17	Encoder 0 actual engineering value	read-only	<p>Actual engineering value of encoder (counting mode 0)</p> <p>The data is a 32-bit floating-point number stored in CDAB order.</p> <p>It is the value obtained by multiplying the encoder counter by the pulse multiplier set on the webpage</p>
40019~40020	18~19	Encoder 1 actual engineering value	read-only	
40021~40022	20~21	Encoder 2 actual engineering value	read-only	
40023~40024	22~23	Encoder 3 actual engineering value	read-only	
40025~40026	24~25	Encoder 0's rotational speed	read-only	<p>Encoder speed (counting mode 0)</p> <p>The data is a 32-bit signed long integer, stored in CDAB order. The speed is calculated based on the number of pulses per revolution set in the configuration webpage.</p>
40027~40028	26~27	Speed of encoder 1	read-only	
40029~40030	28~29	Speed of encoder 2	read-only	
40031~40032	30~31	The speed of encoder 3	read-only	
forty thousand and sixty-eight	sixty-seven	Count reset register	write	<p>An unsigned integer, default to 0. Modify this register to reset the encoder counter or channel counter. After modification, the register will automatically return to 0.</p>

				<p>Write 10: Set the encoder 0 count value to 0,</p> <p>Write 11: Set the count value of encoder 1 to 0,</p> <p>Write 12: Set the count value of encoder 2 to 0,</p> <p>Write 13: Set the count value of encoder 3 to 0,</p> <p>Write 18: Set all encoder count values to 0,</p> <p>Write 20: Set the count value of channel A0 to 0,</p> <p>Write 21: Set the channel B0 count value to 0,</p> <p>Write 22: Set the count value of channel A1 to 0,</p> <p>Write 23: Set the channel B1 count value to 0,</p> <p>Write 24: Set the count value of channel A2 to 0,</p> <p>Write 25: Set the count value of channel B2 to 0,</p> <p>Write 26: Set the count value of channel A3 to 0,</p> <p>Write 27: Set the count value of channel B3 to 0,</p> <p>Write 36: Set all channel count values to 0.</p> <p>Writing other values is invalid.</p>
Address 4X (PLC)	Address (PC, DCS)	Data content	attribute	Data Explanation
40101~40102	100~101	Channel A0 Count	Read/Write	<p>Channel A0~B3 counters (counting mode 1)</p> <p>The data is an unsigned long integer, The storage order is CDAB. Hexadecimal format, (0x00000000~0xFFFFFFFF), reset the counter and directly write 0 to the corresponding register, or write other values as needed.</p>
40103~40104	102~103	Channel B0 Count	Read/Write	
40105~40106	104~105	Channel A1 Count	Read/Write	
40107~40108	106~107	Channel B1 Count	Read/Write	
40109~40110	108~109	Channel A2 Count	Read/Write	
40111~40112	110~111	Channel B2 Count	Read/Write	
40113~40114	112~113	Channel A3 Count	Read/Write	

40115~40116	114~115	Channel B3 Count	Read/ Write	
40117~40118	116~117	Frequency of channel A0	read-only	Pulse frequency of channels A0~B3, (counting mode 1) The data is a 32-bit floating-point number stored in CDAB order.
40119~40120	118~119	Frequency of channel B0	read-only	
40121~40122	120~121	Frequency of channel A1	read-only	
40123~40124	122~123	Frequency of channel B1	read-only	
40125~40126	124~125	Frequency of channel A2	read-only	
40127~40128	126~127	Frequency of channel B2	read-only	
40129~40130	128~129	Frequency of channel A3	read-only	
40131~40132	130~131	Frequency of channel B3	read-only	
40133~40134	132~133	Engineering value of channel A0	read-only	Actual engineering values of channels A0~B3 (counting mode 1) The data is a 32-bit floating-point number stored in CDAB order. The value is the pulse count multiplied by the pulse multiplier set on the webpage. Used for automatic calculation of flow or length, etc.
40135~40136	134~135	Engineering value of channel B0	read-only	
40137~40138	136~137	Engineering value of channel A1	read-only	
40139~40140	138~139	Engineering value of channel B1	read-only	
40141~40142	140~141	Engineering value of channel A2	read-only	
40143~40144	142~143	Engineering value of channel B2	read-only	
40145~40146	144~145	Engineering value of channel A3	read-only	
40147~40148	146~147	Engineering value of channel B3	read-only	
40149~40150	148~149	Speed of channel A0	read-only	Speed of channels A0~B3 (counting mode 1) Long integers (0x00000000~0xFFFFFFFF), The storage order is CDAB, The rotational speed is calculated based on the number of pulses set in the configuration webpage.
40151~40152	150~151	Speed of channel B0	read-only	
40153~40154	152~153	Speed of channel A1	read-only	
40155~40156	154~155	Speed of channel B1	read-only	

40157~40158	156~157	Speed of channel A2	read-only	
40159~40160	158~159	Speed of channel B2	read-only	
40161~40162	160~161	Speed of channel A3	read-only	
40163~40164	162~163	Speed of channel B3	read-only	
forty thousand two hundred and eleven	two hundred and ten	Module Name	read-only	High bit: 0x01 Low bit: 0x66

Example of Modbus RTU communication:

03 (0x03) Read hold register

If the module address is 01, send **010300000002C40B** in hexadecimal to retrieve the data from the register.

01	03	00	00	00	02	C4	0B
Module address	Read and hold register	Register Address High Bit	Low bit register address	Register quantity high	Low register quantity	CRC check low bit	CRC check high bit

If the module replies: **010304CA90FFFC476**, the read data is 0xFFFC490, which is converted to decimal as -13680, indicating that the current count value of encoder 0 is -13680.

01	03	04	CA	ninety	FF	FF	C4	seventy-six
Module address	Read and hold register	The number of bytes in the data	Data 1 high position	Data 1 Low Bit	Data 2 high bit	Data 2 Low Bit	CRC check low bit	CRC check high bit

If the module address is 01, send in hexadecimal: **01030064000285D4** to retrieve the data from the register.

01	03	00	sixty-four	00	02	eighty-five	D4
Module address	Read and hold register	Register Address High Bit	Low bit register address	Register quantity high	Low register quantity	CRC check low bit	CRC check high bit

If the module replies: 010304CA90FFFC476, the read data is 0xFFFC490, which is converted to decimal as 4294953616, indicating that the current count value of channel A0 is 4294953616.

01	03	04	CA	ninety	FF	FF	C4	seventy-six
Module address	Read and hold register	The number of bytes in the data	Data 1 high position	Data 1 Low Bit	Data 2 high bit	Data 2 Low Bit	CRC check low bit	CRC check high bit

06 (0x06) Write a single register

If the module address is 01, send in hexadecimal: **01060043000AF819**, which means reset the count value of encoder 0.

01	06	00	forty-three	00	0A	F8	nineteen
----	----	----	-------------	----	----	----	----------

Module address	Write a single hold register	Register Address High Bit	Low bit register address	data-high	data-low	CRC check low bit	CRC check high bit
----------------	------------------------------	---------------------------	--------------------------	-----------	----------	-------------------	--------------------

If the module replies: **01060043000AF819**, it means the setting is successful, and the count value of encoder 0 is changed to 0.

01	06	00	forty-three	00	0A	F8	nineteen
Module address	Write a single hold register	Register Address High Bit	Low bit register address	data-high	data-low	CRC check low bit	CRC check high bit

Example of Modbus TCP communication:

01 (0x01) Reading coil

In a remote device, use this function code to read the continuous status of the coil from 1 to 2000. The request PDU specifies the starting address, which is the designated first coil address and coil number. Address the coil from scratch. Therefore, addressing coils 1-16 are 0-15.

Divide the coils in the response message into individual coils based on each bit in the data field. The indication status is 1=ON and 0=OFF. The first data serves as the LSB (least significant bit) of the byte, and the subsequent coil data is arranged in ascending order to form an 8-bit byte. If the returned output quantity is not a multiple of eight, the remaining bits in the last data byte will be filled with zeros (up to the high-order end of the byte). The byte count field indicates the complete number of bytes in the data

Example of Function Code 01:

request			response		
Field Name		hexadecimal	Field Name		hexadecimal
MBAP message header	Transmission identification	01	MBAP message header	Transmission identification	01
		00			00
	Protocol Logo	00		Protocol Logo	00
		00			00
	length	00		length	00
		06			04
	Unit identifier	01		Unit identifier	01
Function code		01	Function code		01
Starting address Hi		00	Byte count		01
Starting address Lo		twenty	output data		00
Output quantity Hi		00			
Output quantity Lo		08			

03 (0x03) Read hold register

In a remote device, use this function code to read the contents of consecutive blocks in the hold register. The request PDU specifies the starting register address and the number of registers. Address registers from scratch. Therefore, addressing registers 1-16 are 0-15. In the response message, each register has two bytes, with the first byte being the data high bit and the second byte being the data low bit.

Example of Function Code 03:

request			response		
Field Name		hexadecimal	Field Name		hexadecimal
MBAP message header	Transmission identification	01	MBAP message header	Transmission identification	01
		00			00
	Protocol Logo	00		Protocol Logo	00
		00			00
	length	00		length	00
		06			05
	Unit identifier	01		Unit identifier	01
Function code		03	Function code		03
Starting address Hi		00	Byte count		02
Starting address Lo		twenty	Register value Hi		00
Register number Hi		00	Register value Lo		00
Register number Lo		01			

05 (0x05) Write a single coil

On a remote device, use this function code to write a single output as ON or OFF. The request PDU specifies the mandatory coil address. Address the coil from scratch. Therefore, addressing coil address 1 is 0. The constant of the coil range indicates the requested ON/OFF state. Hexadecimal value 0xFF00 requests the coil to be ON. Hexadecimal value 0x0000 requests the coil to be OFF. All other values are illegal and have no effect on the coil. The correct response is the same as a request.

Example of Function Code 05:

request			response		
Field Name		hexadecimal	Field Name		hexadecimal
MBAP message header	Transmission identification	01	MBAP message header	Transmission identification	01
		00			00
	Protocol Logo	00		Protocol Logo	00
		00			00
	length	00		length	00
		06			06
	Unit identifier	01		Unit identifier	01
Function code		05	Function code		05
Output Address Hi		00	Output Address Hi		00
Output address Lo		00	Output address Lo		00
Output value Hi		FF	Output value Hi		FF
Output value Lo		00	Output value Lo		00

06 (0x06) Write a single register

In a remote device, use this function code to write a single hold register. The request PDU specifies the address written to the register. Address registers from scratch. Therefore, address register address 1 is 0.

The correct response is the same as a request.

Example of Function Code 06:

request			response		
Field Name		hexadecimal	Field Name		hexadecimal
MBAP message header	Transmission identification	01	MBAP message header	Transmission identification	01
		00			00
	Protocol Logo	00		Protocol Logo	00
		00			00
	length	00		length	00
		06			06
	Unit identifier	01		Unit identifier	01
Function code		06	Function code		06
Register Address Hi		00	Register Address Hi		00
Register Address Lo		00	Register Address Lo		00
Register value Hi		00	Register value Hi		00
Register value Lo		FF	Register value Lo		FF

15 (0x0F) Write multiple coils

On a remote device, use this function code to write multiple outputs as ON or OFF. The request PDU specifies the mandatory coil address. Address the coil from scratch. Therefore, addressing coil address 1 is 0. The constant of the coil range indicates the requested ON/OFF state. The data is converted from hexadecimal to binary and arranged in bits, with a bit value of 1 requesting the coil to be ON and a bit value of 0 requesting the coil to be OFF.

Example of Function Code 15:

request			response		
Field Name		hexadecimal	Field Name		hexadecimal
MBAP message header	Transmission identification	01	MBAP message header	Transmission identification	01
		00			00
	Protocol Logo	00		Protocol Logo	00
		00			00
	length	00		length	00
		06			06
	Unit	01		Unit identifier	01


	identifier				
Function code		0F	Function code		0F
Start address Hi		00	Start address Hi		00
Starting address Lo		00	Starting address Lo		00
Number of coils Hi		00	Number of coils Hi		00
Number of coils Lo		02	Number of coils Lo		02
Byte count		01			
Output value		02			

16 (0x10) Write multiple registers

In a remote device, use this function code to write multiple hold registers. The request PDU specifies the address written to the register. Address registers from scratch. Therefore, address register address 1 is 0. Example of Function Code 16:

request			response		
Field Name		hexadecimal	Field Name		hexadecimal
MBAP message header	Transmission identification	01	MBAP message header	Transmission identification	01
		00			00
	Protocol Logo	00		Protocol Logo	00
		00			00
	length	00		length	00
		06			06
	Unit identifier	01		Unit identifier	01
Function code		ten	Function code		ten
Start register address Hi		00	Start register address Hi		00
Start register address Lo		00	Start register address Lo		00
Number of registers Hi		00	Number of registers Hi		00
Number of registers Lo		02	Number of registers Lo		02
Byte count		04			
Register value Hi		00			
Register value Lo		05			
Register value Hi		00			
Register value Lo		06			

Dimensions: (Unit: mm)

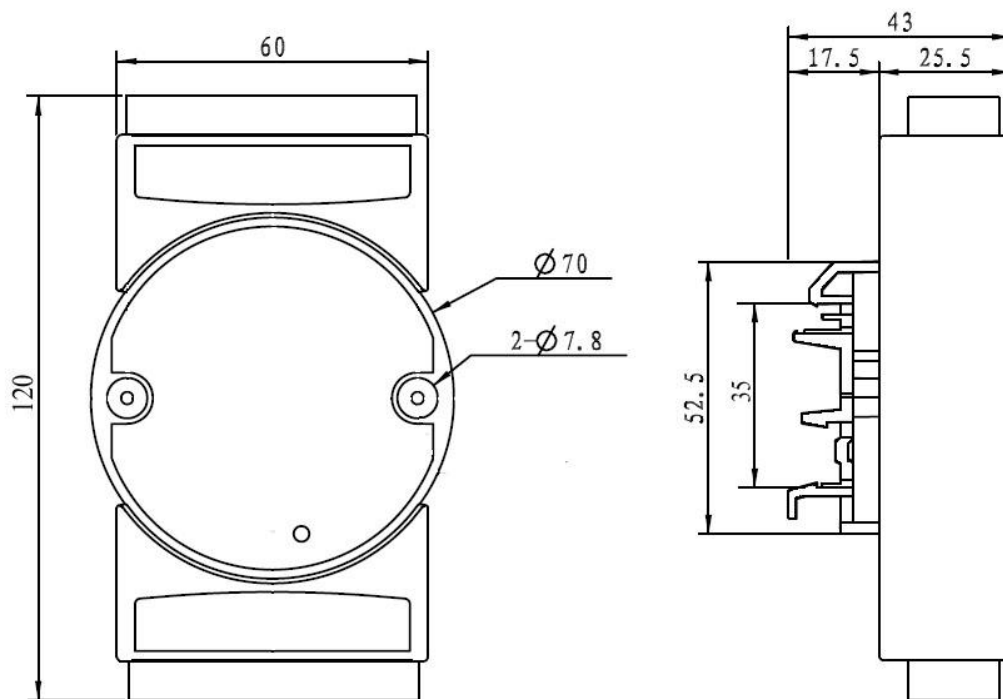

Can be installed on standard DIN35 rails

guarantee:

Within two years from the date of sale, if the user complies with the storage, transportation, and usage requirements and the product quality is lower than the technical specifications, it can be returned to the factory for free repair. If damage is caused due to violation of operating regulations and requirements, device fees and maintenance fees shall be paid.

Copyright:

Copyright © 2022 Shenzhen Weijunrui Technology Co., Ltd.

Without permission, no part of this manual may be copied, distributed, translated, or transmitted. This manual is subject to modification and update without prior notice.

Trademark:

The other trademarks and copyrights mentioned in this manual belong to their respective owners.

Version number: V1.0

Date: October 2022